


# QUICK START STEPS



Login to Sigfox Backend.  
Click New device.  
Create new device using the Device ID, PAC and your selected device type.  
End product certificate is P\_0178\_6E75\_01





Run the node activation app on an android device. Click on the ACTIVATE DEVICE button and wait for the response. Once the node activates, the node device ID will be shown in the list in the app.  
Please refer to slide 2 for the detailed process flow.

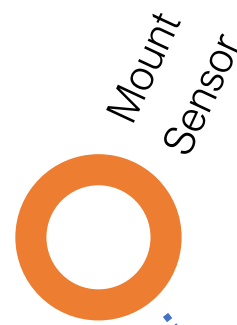


Select your desired location.  
Bolt down the device with the bolts provided OR drill a hole in the ground for flush version.



Place a strong magnet over the device at the location shown by the red spot for 11 seconds. (Refer slide 3)  
Wait for the reset message to appear in the backend messages screen.  
The device then goes into bootloader mode for 2 minutes. Post this it will advertise its ID for and then send its first Vacant message with downlink.  
Device is now operational.

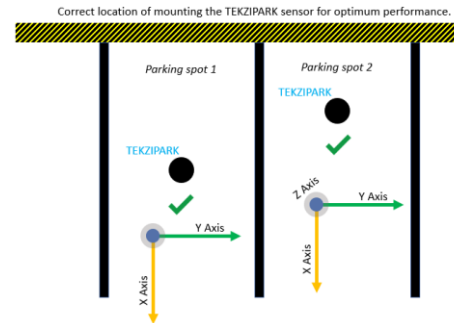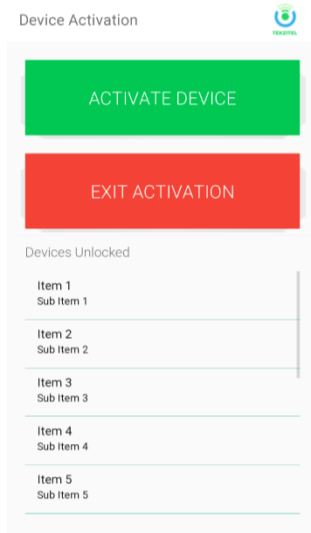

SURFACE VERSION 1

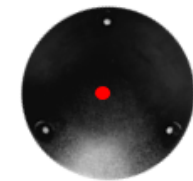


SURFACE VERSION 2



FLUSH VERSION

# UNLOCKING FLOW

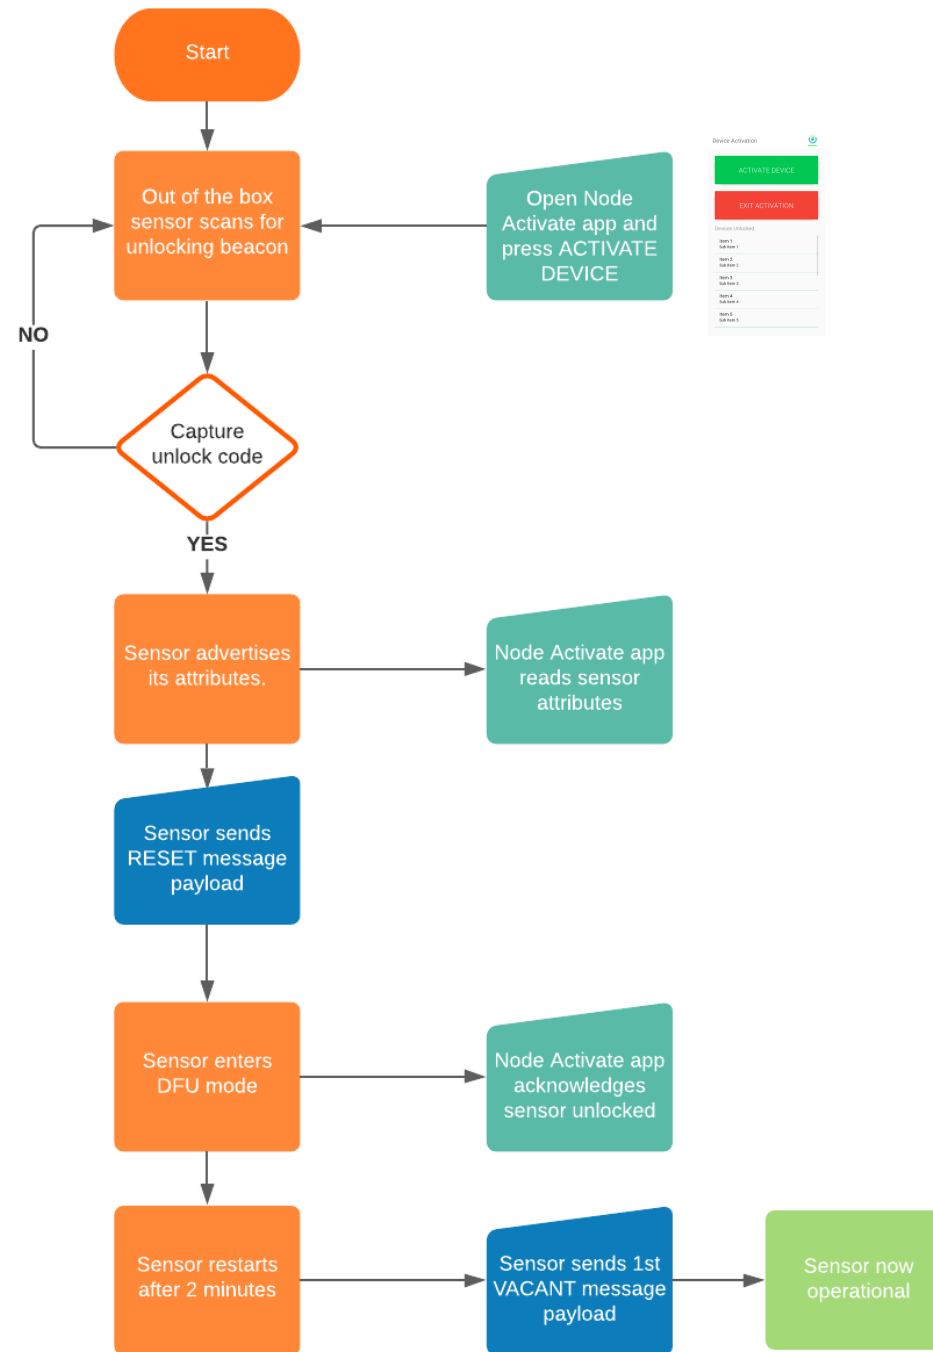

# MAGNETIC RESET FLOW

